

7. OPTIONS

7-1 Air Intake Set

The air intake set includes:

- Quick coupling
- Air tube
- Check valve
- Air regulator

Screw the quick coupling firmly into the generator. Connect the check valve and regulator, ensuring the correct direction of air flow. Cut the air tube to the desired length.


Caution

***The check valve prevents sudden backflow.**
***If water may leak from the tube end, position the tube tip above the liquid surface.**

7-2 Flowmeter

Connect using the air tube, ensuring correct flow direction.

Adjust air volume using the regulator. Keep the flowmeter adjustment knob fully open.

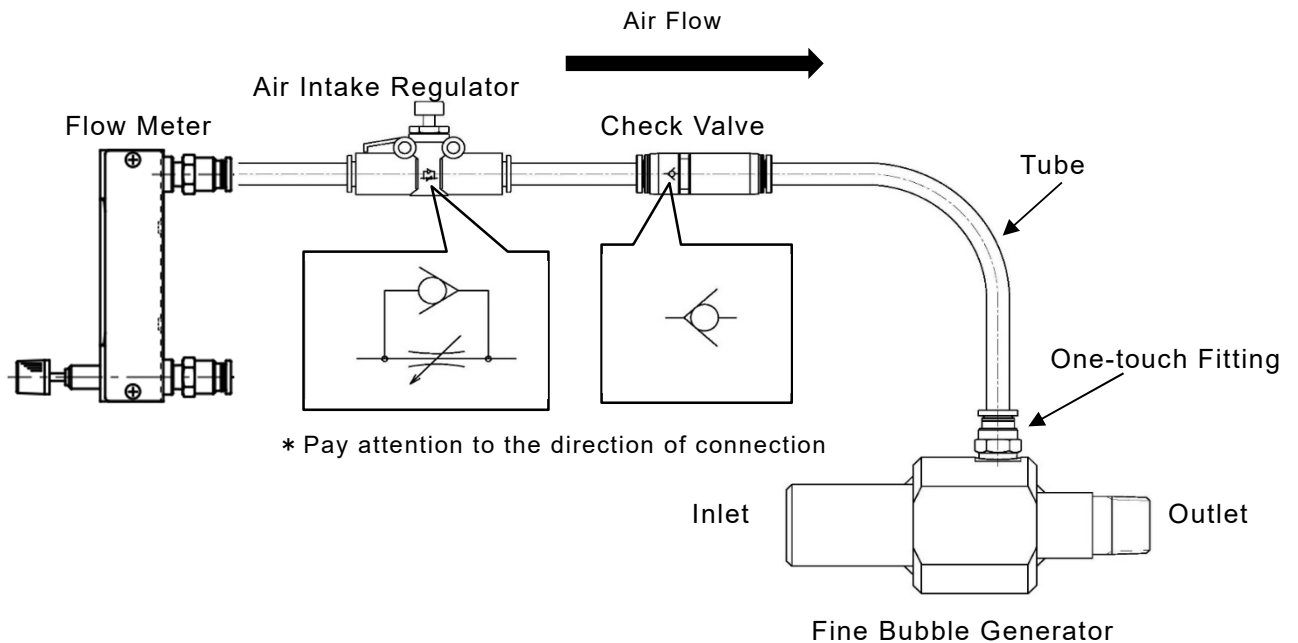

Assembly example